



Model:
RN405BRKA**

Refrigerator

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service,
please register your product at

www.samsung.com/register

条形码

Free Standing Appliance DA68-02507D(1)

SAMSUNG

features of your new refrigerator

KEY FEATURES OF YOUR NEW REFRIGERATOR

Your Samsung Refrigerator comes equipped with many space-saving, innovative storage and energy-efficient features.

- **Multi compartments and multi temperature zones**

This refrigerator has 5 compartments: fridge, vegetable & fruit compartment, temperature-variable compartment, Ice making compartment and freezer. Fridge, temperature-variable compartment and freezer have separate adjustment of temperature zone which meet different demands of users.

- **Humidifying and fresh-keeping feature**

Distribute water mist to the vegetable & fruit compartment through the air sinker, so as to adjust humidity of the air in the compartment, reduce water loss of vegetables and fruits and achieve the result of keeping fresh.

- **Separate vegetable & fruit compartment**

The separate vegetable & fruit compartment can keep fruits and vegetables fresh even when they are stored together.

- **Temperature-variable compartment - Wide range of temperature adjustment**

Fish and meat can be stored in the Temperature-variable compartment. Different storage temperatures can be obtained through adjusting the air door. Different temperatures are set according to types of foods, so as to meet demands of users on different storage temperatures.

- **Automatic ice maker**

This refrigerator is equipped with a full automatic ice making device and is convenient for your life.

- **Inverter**

It saves energy and keeps fresh. The refrigeration system is composed of an inverter compressor and an inverter fan, chills every compartment through adjusting and controlling their temperature accurately and realizes optimal operation.

- **LED touch display**

It confirms temperature and operation condition of the Refrigerator.

- **Frost-free refrigerator**

Your refrigerator is frost-free. Every compartment is equipped with spatial air cool circulation and refrigeration system, so no frost will be formed in compartments and it avoids problem of manual defrosting.

- **Door alarm**

A helpful beeper alerts you if a door keeps ajar over 2 minutes.

- **S-plasma ion plasma sterilization technology (option)**

The plasma sterilizer releases active hydrogen and oxygen ion and combines them to be hydroxyl radical HOO-. When meeting virus, it can neutralize cation of the virus, reduce its activity and produce H₂O.

CE Notice

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC) and the Eco-Design Directive (2009/125/EC) implemented by Regulation (EC) No 643/2009 of the European Union



For easy future reference, write the model and serial number down. You will find your model number and serial number on the back of the refrigerator.

Model # _____
Serial # _____

safety information

SAFETY INFORMATION



WARNING

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.



WARNING

- Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

 WARNING	Indicates that a danger of death or serious injury exists.
 CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must NOT disassemble.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	Represents a ground is needed to prevent electric shock.
	It is recommended that this symbol be handled by service man.

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

- This refrigerator must be properly installed and located in accordance with the manual before it is used.
- Use this appliance only for its intended purpose as described in this user manual.
- We strongly recommend that any servicing be performed by a qualified individual.
- R600a can be used as a refrigerant. Check the compressor label or the circuit diagram on the rear of the appliance to see which refrigerant is used for the refrigerator



- In case of R600a refrigerant, this gas is natural gas with high environmental compatibility that is, however, also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

safety information



WARNING




- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.
- The room must be 1m³ in size for every 8g of R600a refrigerant inside the appliance.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.
- Please dispose of the packaging material for this product in an environmentally friendly manner.
- Don't replace parts of the refrigerator.
- keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
This warning is only applicable to appliances whose refrigerating circuits which are accessible to the user.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

SEVERE WARNING SIGNS



WARNING

- Do not install the refrigerator in a damp place or place where it may come in contact with water.
 - Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliance. Don't put burning wax candle or fireworks on the refrigerator.
 - Otherwise, it will result in hazards of electric shock and fire.
- Allow sufficient space to install the refrigerator on a flat surface.
 - If your refrigerator is not level, the internal cooling system may not work correctly.
- Use only 220~240V power. Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical which has a voltage rating that matched the rating plate.
 - This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
 - Damage to the cord may cause a short-circuit, fire and/or electric shock.
- Make sure that the power plug is not squashed or damaged by the back of the refrigerator.
- Do not bend the power cord excessively or place heavy articles on it.
 - This constitutes a fire hazard.
- Do not use a loose socket or a cord that shows cracks or abrasion damage along its length or at either end.
- If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- Do not insert the power plug with wet hands.
- Remove any foreign matter or dust from the power plug pins.
 - Otherwise there is a risk of fire.
- If the refrigerator is disconnected from the power supply, you should wait for at least ten minutes before plugging it back.
- If the wall socket is loose, do not insert the power plug.
 - There is a risk of electric shock or fire.
- The appliance must be positioned so that the plug is accessible after installation.
- Do use separate and reliable earthing power. Don't share a socket with other appliances. In order to ensure safety, the socket and its connecting wire must be able to bear over 10A current.

- 
 - The refrigerator must be grounded.
 - You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
- 
 - Never use gas pipes, telephone lines or other potential lightning rods as ground.
 - Improper use of the ground plug can result in electric shock.
- 
 - Do not disassemble or repair the refrigerator by yourself.
 - You run risk of causing a fire, malfunction and/or personal injury.
- If you smell pharmaceutical or smoke, pull out power plug immediately and contact your Samsung electronics service center.
- Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Don't dismantle, repair or adapt structure of the refrigerator unadvisedly; otherwise, its refrigeration system may be damaged. Do not damage the refrigerant circuit.
- Do not place or use electrical appliance inside the refrigerator/freezer, unless they are of a type recommended by the manufacturer.
- Don't put a dryer in the refrigerator for drying.
- Do not replace LED lamp privately and please contact the specialized repair staff if necessary.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let children hang on the door. If not, a serious injury may occur.
- Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
 - This may cause frostbite.
- If the refrigerator is not to be used for a long period of time, pull out the power plug.
 - Deterioration in the insulation may cause fire.
- Do not store articles on the top of the appliance.
 - When you open or close the door, the articles may fall and cause personal injury and/or material damage.

CAUTION SIGNS



- Before the refrigerator is put into use, its leveling legs must be adjusted to contact the ground, and the refrigerator must be leveled, so as to avoid tilting.
- This product is intended only for the storage of food in a domestic environment.
- Manufacturer's recommended storage times should be adhered to. Refer to relevant instructions.
- Bottle should be stored tightly together so that they do not fall out.
- Don't store any carbonated drink or soda water in the freezer.
- Do not overfill the refrigerator with food.
 - When you open the door, an item may fall out and cause personal injury or material damage.
- Do not put bottles or glass containers in the freezer.
 - When the contents freeze, the glass may break and cause personal injury.
- Do not spray inflammable gas near the refrigerator.
 - There is a risk of explosion or fire.
- Do not directly spray water inside or outside the refrigerator or wipe it with benzene or alcohol.
 - There is a risk of fire or electric shock.
- the instructions for ice-markers not intended to be connected to the water supply shall state the substance of the following warning:
 - fill with potable water only.

safety information

- Do not store volatile or flammable substances in the refrigerator.
 - The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.
- You are recommended to empty the refrigerator and turn it off when you have a long term journey.
- Do not re-freeze frozen foods that have thawed completely.
- Do not store pharmaceuticals products, scientific materials or temperature-sensitive products in the refrigerator.
 - Products that require strict temperature controls must not be stored in the refrigerator.
- Do not put a container filled with water on the refrigerator.
 - If spilled, there is a risk of fire or electric shock.
- The two legs in the front of the refrigerator are rotatable. The front legs contact the ground so that the refrigerator will not move when opening its doors.

CAUTION SIGNS FOR CLEANING

- Do not insert your hands into the bottom area under the appliance.
 - Any sharp edges may cause personal injury.
- Don't use wet cloth to clean the plug or remove its foreign substances or dust.
 - Otherwise, it will result in fire hazard.

WARNING SIGNS FOR DISPOSAL

- When disposing of this or other refrigerator/s, remove the door/door seals, doorlatch so that small children or animals cannot become trapped inside.
- Leave the shelves in place so that children may not easily climb inside.

R600a is used as a refrigerant. Check the compressor label or the rating label on the rear of the appliance to see which refrigerant is used for your refrigerator. When this product contains flammable gas(Refrigerant R600a)contact your local authority in regard to safe disposal of this product.
- Cyclopentane is used as a insulation blowing gas. The gases in insulation material require special disposal procedure. Please contact your local authorities in regard to the environmentally safe disposal of this product. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal. The pipes shall be broke in the open space.



CAUTION

In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.

Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures.

However, you should minimize the number of door openings while the power is off.

But should the power failure last more than 24hours, remove all frozen food; you'd better rise temperature of the freezer to at least 0°C and remove all ice blocks in the ice bunker; otherwise, it will result in flowing water or damage of the mechanism.

safety information

ADDITIONAL TIPS FOR PROPER USAGE



- Allow the appliance to stand for 2 hours after installation.
- To get best performance of product,
 - Do not place foods too closely in front of the vents at the rear of the appliance as it can obstruct free air circulation in the freezer compartment.
 - Wrap the food up properly or place it in airtight containers before put it into the fridge freezer
 - Do not put any newly introduced food for freezing near to already frozen food.
- Do not place carbonated or izzy drinks in the freezer compartment.
- Please observe maximum storage times and expiry dates of frozen goods.
- There is no need to disconnect the refrigerator from the power supply if you will be away for less than three weeks. But, remove all the food if you are going away for the three weeks or more. Unplug the refrigerator and clean it, rinse and dry.
- Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. But should the power failure last more than 24 hours, remove all frozen food.
- Do not store food which goes bad easily at low temperature, such as bananas, melons.
- Place the ice tray at the originally provided position by manufacturer in order to achieve optimal ice-freezing.
- Your refrigerator is frost-free, so you are no need to defrost manually and the refrigerator will do so automatically.
- Temperature rising during the defrost can comply with **ISO** requirement. But If you want to prevent an undue rise in the temperature of the frozen food while defrosting the appliance, please wrap the frozen food in several layers of paper such as newspaper.
- Any increase in temperature of frozen food during defrosting can shorten its storage life.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation.
Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (radiator, for example).
- Never block any vents or grilles on the appliance.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw.
You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the appliance open for too long when putting food in or taking food out. The shorter time for which the door is open, the less ice will form in the freezer.
- Clean the rear of the refrigerator regularly. Dust increases energy consumption.
- Do not set temperature colder than necessary.
- Ensure sufficient air exhaust at the refrigerator base and at the back wall of the refrigerator. Do not cover air vent openings.
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.

contents

SETTING UP YOUR REFRIGERATOR

09

09 Installing the refrigerator

OPERATING YOUR REFRIGERATOR

11

11 Introduction, operation skills and storage notices of refrigerator parts

18 Functions and operation of display panel

21 Disassembly and clean the parts

GENERAL INFORMATION

24

TROUBLESHOOTING

25

INFORMATION CODE

26



setting up your refrigerator

INSTALLING THE REFRIGERATOR

1. Selecting the best location for the refrigerator

A proper distance is kept between the Refrigerator and its surroundings.

Allow clearance to the top, back, left and right when installing. This will help to reduce power consumption and saving energy.

To keep smooth circulation of air around the Refrigerator, please leave the Refrigerator 55mm from wall of both sides and rear side and 300mm from top wall.

* The following table lists heights and depths of different models of Samsung refrigerators.

Model			RN405BRKA**
Dimension (mm)	Width	Door is closed	720 mm
		Fridge door is opened	1126 mm
	Depth	Door is closed	694 mm
		Fridge door is opened (max. size)	994 mm
		Door of Vegetable & fruit compartment is opened	1110 mm
		Doors of ice maker compartment and temperature-variable compartment are opened	1008 mm
		Freezer door is opened	1094 mm
	Height	With door	1875 mm

If the clearance between the Refrigerator and surrounding furniture and wall is too small, it will restrain heat dissipation capability, reduce refrigerating capacity and increase power consumption.

- **Install the Refrigerator at a dry and well-ventilated location**

Install the Refrigerator at a well-ventilated location. Don't install it at a damp or easily damped location so as to prevent metal parts from rusting or being shocked.

- **Avoid heat and direct sunlight**

If the environmental temperature is too high, the refrigerating capacity may reduce and power consumption may increase.


If it is installed at a place full of gas or fog, its surface may discolor.

2. Leveling the Refrigerator

- Put it at a firm and level place.

If the place is uneven, it can be leveled by adjusting the leveling legs at its lower part (rotate anticlockwise to rise).

Note: Open the draws of the freezer while you adjust the leveling legs

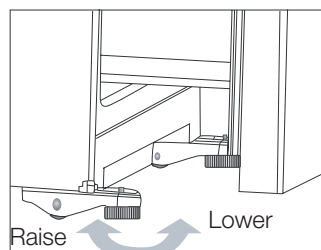


setting up your refrigerator

INSTALLING THE REFRIGERATOR

- When it is installed on carpet or floor, put a firm backing board on it to prevent the ground from discoloring when heated. Don't use the bearing plate provided by us for delivery directly as a backing board.
If it is installed at an uneven place, it will lead to shake and noise and shorten its service life.
- Adjust front of the Refrigerator to keep it a little bit higher than the rear part.
Shake the Refrigerator from front to back, left and right and across corners to check if it is firm; adjust leveling legs of the front part again to keep it a little bit higher than the rear.
If the front is lower, the Refrigerator doors may not be closed, its performance may be badly affected, and some frost may be formed.

3. Adjust parallelism

If doors descend after the Refrigerator is installed and stored with foods, please adjust parallelism of doors according to drawings 4~5 days after installation.

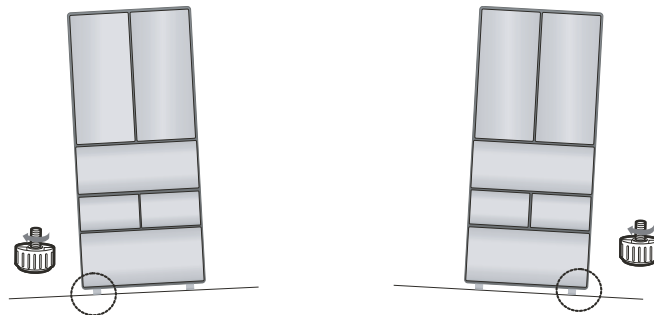

4. Clean, install accessories and connect power

Remove the dust accumulated on the Refrigerator while transporting.

Refer to the following instruction of the manual for installation of relevant accessories.

To prevent damage during transporting, some accessories are packed together.

Insert power plug to 220V socket. Don't share a socket with other equipment.

02 OPERATING




operating_11

operating your refrigerator



NAMES, OPERATION SKILLS AND STORAGE NOTICES OF FRIDGE PARTS





Names of fridge parts



 To get the best energy efficiency of this product, please leave all selves, drawers and baskets on their original position like as above illustration.





Store foods in the fridge

(1) Dressing case	Put cosmetics or some expensive and small items.	
(2) Small bottle holder	Store foods with small packages.	
(3) Movable Center Pillar	Ensure tightness of the fridge	
(4) Fresh food compartment	Store vegetable and fruit. This drawer is airproof. The foods stored here will not affect those in the fridge, so it keeps original taste of the foods in the fridge	
(5) Water container	Provide water for making ice.	
(6) Humidifier	Provide steam for the vegetable & fruit compartment and achieve the result of keeping fresh.	
(7) Plasma sterilizer (option)	Plasma sterilization of the fridge.	

(8) Upper glass shelf	Store various foods and drinks.	
(9) Foldable shelf	Store various foods and drinks. After it is folded, the lower glass shelf can store higher foods and drinks.	
(10) Lower glass shelf	Store various foods and drinks.	
(11) Egg tray	Store eggs and other small foods.	
(12) Small drawer	Store vegetable and fruit.	
(13) Big bottle holder	Store big foods, i.e. big bottles and vessels etc.	

OPERATION SKILLS OF FRIDGE PARTS

1. In order to store more and higher foods and drinks, the foldable shelf can be adjusted (refer to disassembly and cleaning section of the foldable shelf for adjusting method).
A bigger space can be obtained by rotating the foldable shelf.
2. Adjust height of the small bottle holder: there are high and low loose cores on the inner layer for storing small bottle holder. It can be adjusted according to demands of users to meet requirements of storage.
3. If the bottles on the big bottle holder collide with those on the small bottle holder, the small bottle holder can be adjusted to higher loose core or removed directly.
4. Take out the water container from the fridge, then water can be added.
5. When the humidifier's water level indicator lamp on the display panel of fridge door is red, it means the humidifier is short of water. Slip out of the small cover from the humidifier's cover plate, add water to water level of the water container, and then cover it.

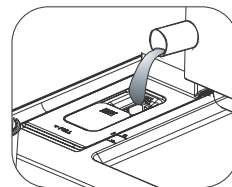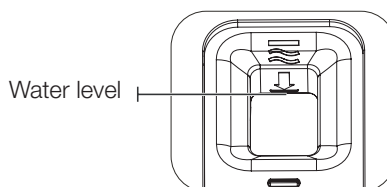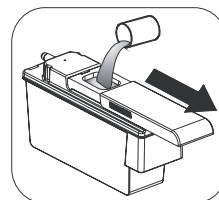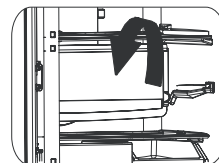

Note:

The storage time should not exceed seven days in the water container. Replace the water on time.

After the fridge door is fully closed, the humidifier can work properly.


Don't take out the humidifier from the refrigerator to add water.

When you don't need to use the function of ice making, you can take the water container away for getting more space.


operating your refrigerator

OPERATION SKILLS OF FRIDGE PARTS

6. When the movable center pillar is turned over, the door can't be closed properly. In such case, the movable center pillar should be placed to its original position.

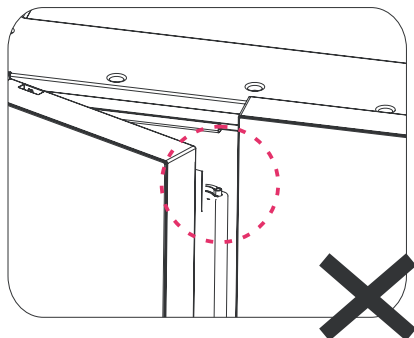


When the movable center pillar is at the above state, the door can't be closed properly.

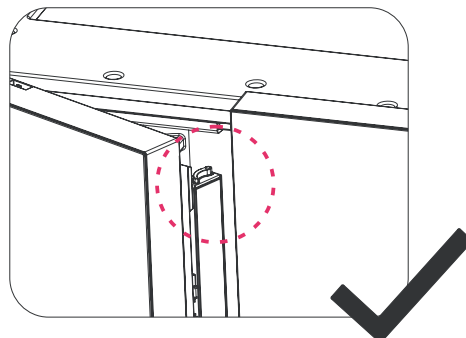

When the movable center pillar is at the above state, the door can be closed properly.

Note: In order to prevent frost, the movable center pillar is equipped with a heater. It's normal if the movable center pillar gives out heat and it will not affect the stored foods.

7. Two sections design of the bottom big bottle holder: you can put foods according to demands.
You are recommended to put bottles less than 1.5L at rear side of the big bottle holder.
In order to close doors properly and keep low power consumption, you'd better not store foods higher than the bottle holder at front side.

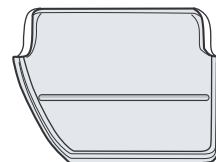


NOTICES ON STORAGE OF THE FRIDGE

1. Don't put damp foods on the upper shelf; or they may be frozen when contacting cold air.
2. Before being stored in the Refrigerator, foods, vegetables, fruits and their packages should be cleaned and wiped, so as to avoid affecting adjacent foods.
3. In order to prevent bottles from falling while opening doors, they should be put together tightly.
4. Air vents of the fridge are at both sides of its inside, so foods can't be stored at both sides near back of the fridge.

NAMES, OPERATION SKILLS AND STORAGE NOTICES OF VEGETABLE & FRUIT COMPARTMENT PARTS

Names of vegetable & fruit compartment parts

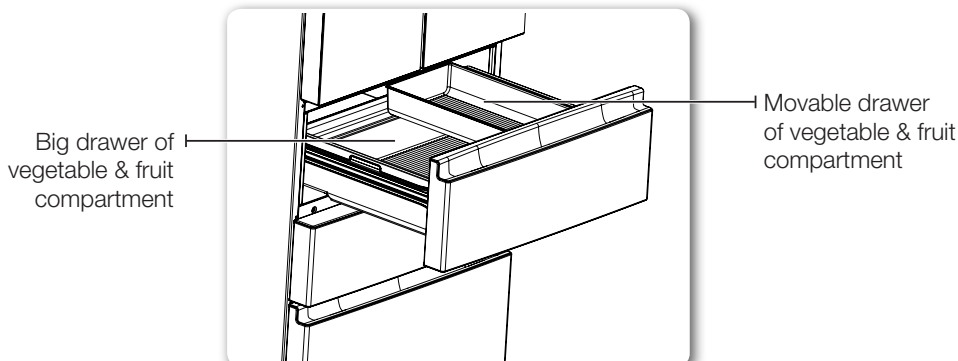


OPERATION SKILLS AND STORAGE NOTICES OF THE VEGETABLE & FRUIT COMPARTMENT PARTS

1. There are upper and lower drawers in the vegetable & fruit compartment. Fruits and vegetables can be stored separately here.
2. Position of the moveable drawer within the vegetable & fruit compartment can be adjusted according to sizes of foods.
3. The foods to be stored here can't exceed certain height; otherwise the moveable drawer can't be put in place or be closed properly.
4. Vegetables and fruits should be put in drawers of the vegetable & fruit compartment. Don't put them outside the drawer.


Note: Temperature of the vegetable & fruit compartment is uncontrollable and is adjusted automatically according to temperature change of the fridge.

OPERATION SKILLS AND STORAGE NOTICES OF THE ICE MAKING COMPARTMENT'S PARTS

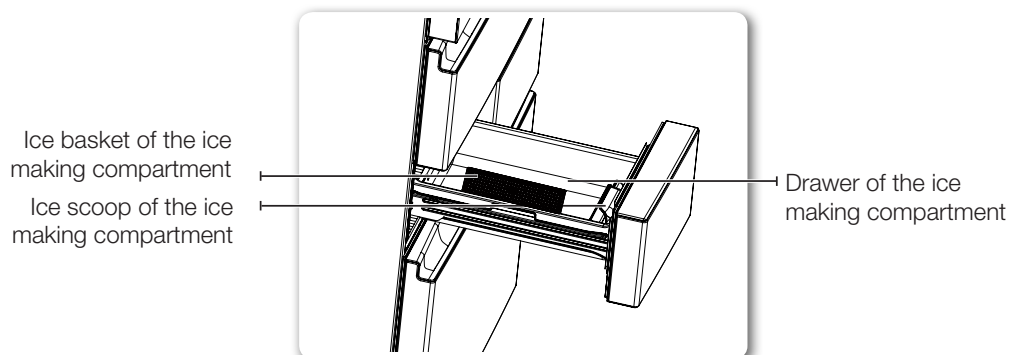

OPERATION SKILLS AND STORAGE NOTICES OF THE ICE MAKING COMPARTMENT'S PARTS


1. It can store ice blocks while making ice and acts as a freezer while not making ice. However, the foods stored here should not exceed bottom of the automatic ice maker.
2. When the ice making compartment is used as a freezer, please use according to operation skills and storage notices of the freezer.
3. If the ice maker is not used for a long time, please don't use the initial ice made by it.
4. The water container must contain clean drinking water while making ice, so as to avoid blocking of the refill tube and damage of the ice maker.

 **WARNING** If you touch foods or vessels with wet hands directly, your hands may frostbite, or you may be injured due to crack of vessels. Please operate with care.

operating your refrigerator

NAMES, OPERATION SKILLS AND STORAGE NOTICES OF TEMPERATURE-VARIABLE COMPARTMENT PARTS

Names of temperature-variable compartment parts

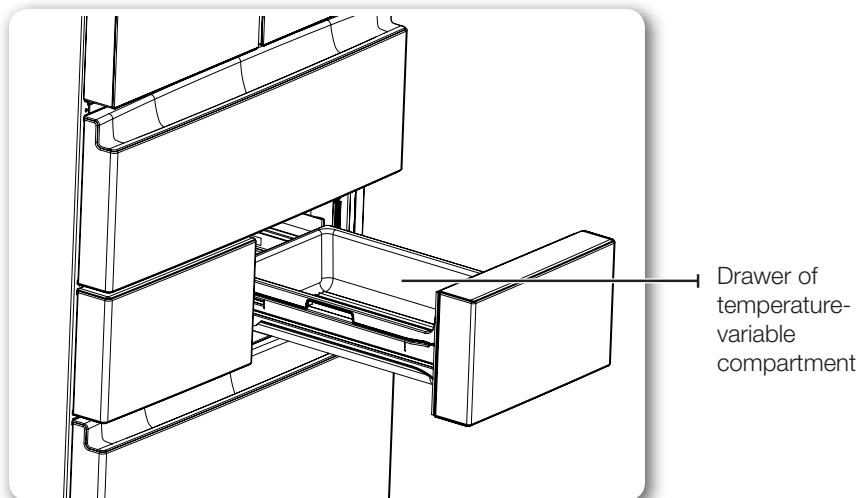

OPERATION SKILLS OF TEMPERATURE-VARIABLE COMPARTMENT PARTS

1. Its drawer can only store foods not exceeding certain height; otherwise it may be unable to be closed properly.

STORAGE NOTICES OF TEMPERATURE-VARIABLE COMPARTMENT


1. Don't put bottles in temperature-variable compartment; or the substances in bottles will freeze and bottles may break.
2. Don't put the unfrozen foods in temperature-variable compartment again; or it will result in loss of flavor and nutrition.
3. Don't touch foods or vessels (particularly metal vessels) with wet hands; or hands will frostbite.
4. Don't put foods outside the drawer of temperature-variable compartment.
5. You'd better not store ice cream and equivalents.
6. Setting range of the temperature of temperature-variable compartment is -7°C ~ -18°C . When it is set to -7°C , fish and meat can be stored at soft freezing state for a short time.



If you touch foods or vessels with wet hands directly, your hands may frostbite, or you may be injured due to crack of vessels. Please operate with care.


NAMES, OPERATION SKILLS AND STORAGE NOTICES OF FREEZER PARTS

Names of freezer parts

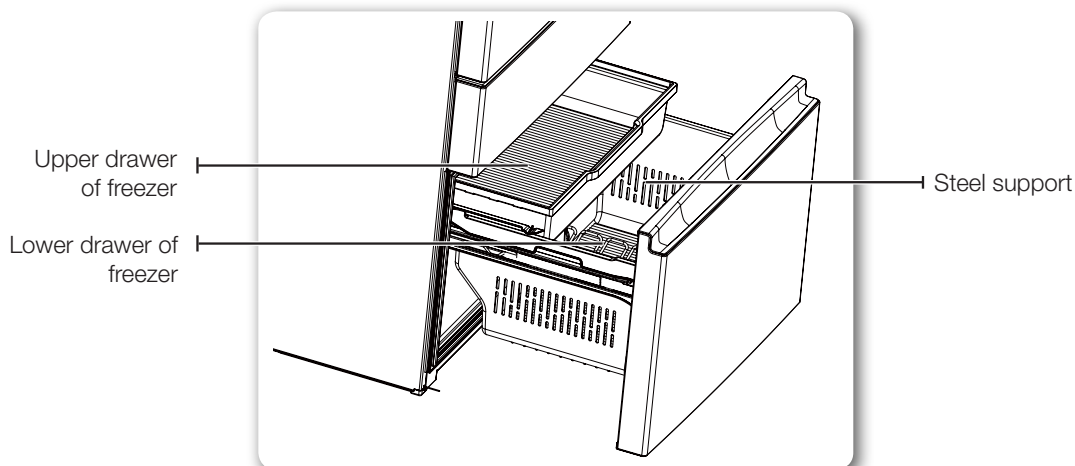

OPERATION SKILLS OF FREEZER PARTS

1. Its upper drawer is for storing small package foods to be frozen.
2. Its lower drawer is for storing big package foods to be frozen. The steel support in the lower drawer can be placed at 2 positions or be dismantled. The steel support can hang small plastic bags. When the foods to be frozen are bulky, the steel support can also be dismantled.
3. The foods to be stored here can't exceed certain height; otherwise the upper drawer can't be put in place, be closed properly or achieve the aim of freezing foods.

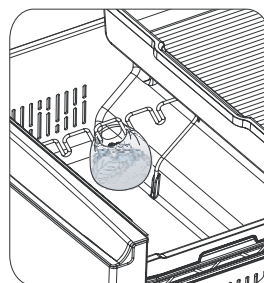

STORAGE NOTICES OF FREEZER PARTS


1. Don't put bottles in the freezer; or the substances in bottles will freeze and bottles may break.
2. Don't put the unfrozen foods in the freezer again; or it will result in loss of flavor and nutrition.
3. Don't touch foods or vessels (particularly metal vessels) with wet hands; or hands will frostbite.
4. Don't put foods outside the drawer of freezer.



If you touch foods or vessels with wet hands directly, your hands may frostbite, or you may be injured due to crack of vessels. Please operate with care.
When pulling out the lower drawer, you should be careful not to injure feet.

operating your refrigerator

FUNCTIONS AND OPERATION OF DISPLAY PANEL

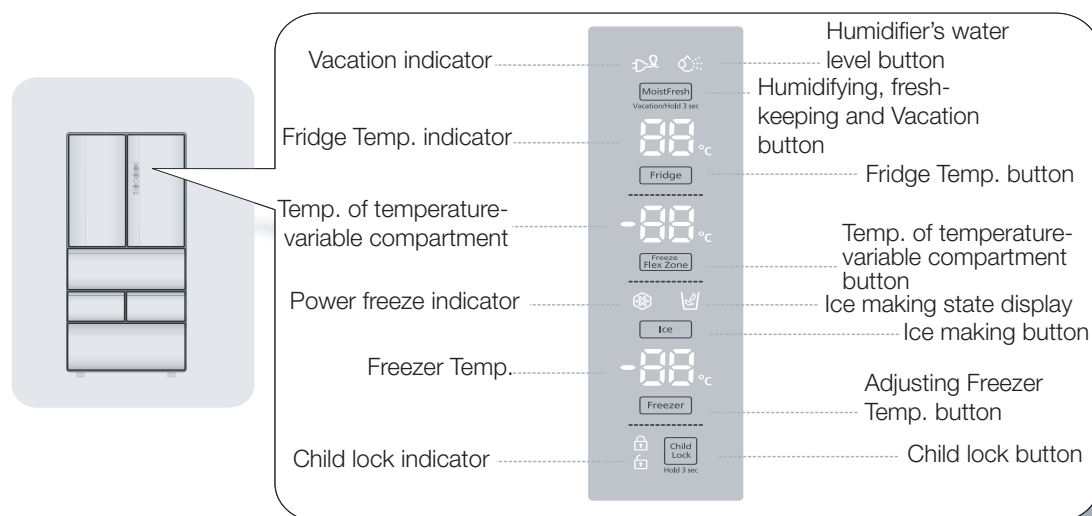

1. Adjust temperature of fridge

- When the Refrigerator is powered on for the first time, the fridge is set to 3 °C automatically. When pressing "Fridge" once, the fridge will display current setting temperature. If pressing "Fridge" again within 5 seconds, the temperature can be adjusted.

Setting temperatures of fridge are as follows:

3 °C → 2 °C → 1 °C → 7 °C → 6 °C → 5 °C → 4 °C → 3 °C

2. Adjust temperature of temperature-variable compartment

- When the Refrigerator is powered on for the first time, the temperature-variable compartment is set to -12°C automatically. When pressing "Temp.-variable" once, the temperature-variable compartment will display current setting temperature. If pressing "Temp.-variable" again within 5s, the temperature can be adjusted.

Setting temperatures of temperature-variable compartment are as follows:

-12 °C → -13 °C → -14 °C → -15 °C → -16 °C → -17 °C → -18 °C → -7 °C → -8 °C → -9 °C
→ -10 °C → -11 °C → -12 °C

3. Adjust temperature of the freezer

- When the Refrigerator is powered on for the first time, the freezer is set to -20 °C automatically. When pressing "Freezer" once, the freezer will display current setting temperature. If pressing "Freezer" again within 5s, the temperature can be adjusted.

Setting temperatures of freezer are as follows:

-20 °C → -21 °C → -22 °C → -23 °C → -23 °C (Power Freeze) → -14 °C → -15 °C → -16 °C
→ -17 °C → -18 °C → -19 °C → -20 °C

- It's recommended that setting temperature of the freezer is lower than that of the temperature-variable compartment.

FUNCTIONS AND OPERATION OF DISPLAY PANEL

4. Child Lock function

- Press “Child Lock” for 3 seconds to switch between lock and unlock. At lock state, only “Child Lock” is valid.
- Display off
About 10 seconds after the door close or display button operation, the display LEDs are turned off except the Child Lock Indicator. It is not mal-function or failure of refrigerator. If any button is touched or door is opened, the display LEDs are turned on.

5. Power freeze function

- In order to freeze foods quickly, you can choose this function.
- Set power freeze: press “Freezer” and enter power freeze state when the panel displays -23°C and “Power Freeze” lights up.
- Cancel power freeze: press “Freezer” and exit from power freeze state when the “Power Freeze” disappears; when the time of power freeze is reached, exit from power freeze automatically, “Power Freeze” disappears, and freezing temperature returns to the setting temperature before power freeze.

6. Ice making

- If you need ice blocks, please press “Ice Making” button to choose ice making feature and the ice making icon lights up; press “Ice Making” button again, the ice making feature is cancelled and its icon goes out.

7. Vacation function

- In order to save energy, when no foods will be stored in the fridge, Vacation function can be chosen to stop its operation.
- When pressing “Vacation” for 3 seconds, Vacation function indicator will lights up; Fridge temperature display goes out; and Fridge compartment is at “Off” state.
- Vacation function will be deactivated if you press and hold the Vacation 3 seconds or press “Fridge” to adjust fridge temperature while Vacation function is on.
- After exiting Vacation function, Vacation indicator goes out, and temperature display of the fridge becomes normal.
- While vacation function is activated, the vegetable & fruit compartment stops operation.

8. Humidifying and fresh-keeping

- Press “humidifying and fresh-keeping” button, then humidifying and fresh-keeping function is selected; its icon lights up; and the humidifier operates according to the specified conditions.
Press “humidifying and fresh-keeping” button, then humidifying and fresh-keeping function is cancelled, and its icon goes out.
- When there is water in the humidifier, the humidifying and fresh-keeping icon is white or greenish yellow.
- When the humidifier is short of water, the humidifying and fresh-keeping icon turns red to remind you to add water, and you will do so according to demand. Water quantity should be lower than limit of the water container; otherwise, water will flow to the vegetable & fruit compartment. The humidifier doesn’t work when short of water.

operating your refrigerator

FUNCTIONS AND OPERATION OF DISPLAY PANEL

9. Self-test function (failure test)

- This function can test failure when the Refrigerator is working.
- When the Refrigerator can't operate or its function buttons can't work properly, please contact your local service center immediately.

10. Door alarm function

- A helpful beeper will alert you if a door of fridge or freezer keeps open or ajar over 2min. The alarm will stop automatically when the door is closed; if not, please contact your local service center immediately.

11. Memory function

- If the freezer is at low temperature when the Refrigerator is turned on again after power failure, the Refrigerator can memorize the cold storage, temperature-variable and freezing temperatures before such failure.

DISASSEMBLY AND CLEAN THE PARTS



CAUTION

- In order to ensure safety, pull out the power plug with a dry hand before cleaning.
- Don't dismantle parts by force; or they may be damaged. After cleaning, they will be assembled in reverse order.
- Don't reach your hands to bottom of the Refrigerator; otherwise you may be injured by metal angles.
- Wipe with a soft cloth dipped with neutral detergent, and then dry with a clean and soft cloth. Don't clean the Refrigerator with putty-powder, petroleum, benzene, hydrochloric acid, hot water or rough brush; otherwise it may be damaged and corroded.
- After cleaning, please check if the power line is damaged or becomes damp and if the plug is too hot. If no problem, it can be plugged in.




WARNING

- Before plugging in, clean every side of electric parts, and wipe the damp left after cleaning with a soft cloth or sponge, so as to prevent water or other liquid from being remained in electric parts and avoid electric shock.


1. Disassembly and clean of shelf and foldable shelf

- Lift interior of the shelf and pull it out (exterior of the splitter plate moves up-dip lightly), and then rotate downwards to take out the shelf;
- Steps to take out foldable shelf:
 1. Lift front of the foldable shelf and pull it to fall the glass;
 2. Push it to full extension;
 3. Hold forepart of the overlapping shelf, and lift to take it out.
- Wash shelf and foldable shelf with clean water, wipe with a dry and soft cloth; assemble shelf and foldable shelf in reverse order.

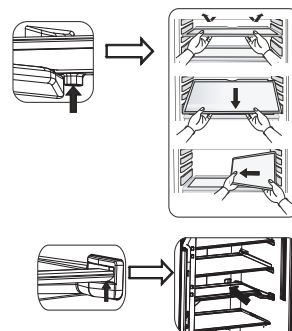


2. Disassembly and clean of dressing case and bottle holder

- Hold the dressing case and bottle holder tightly with one hand, knock upwards from bottom with the other hand to take them out;
- Rinse with clean water, and then wipe with a dry and soft cloth; Assemble then in reverse order.

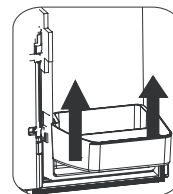

3. Disassembly and clean of the water container

- Pull out the water container, and take it out from the fridge;
- Open its buckle, rotate to certain angle and then remove the cover upwards;
- Press both sides of its filter cartridge with a hand lightly, and take it out when the buckle moves from the groove;
- Take out the sealing gasket from cover edge of the water container;
- Rinse each part, and then wipe with a dry and soft cloth;
- Assemble every part of the water container in reverse order.

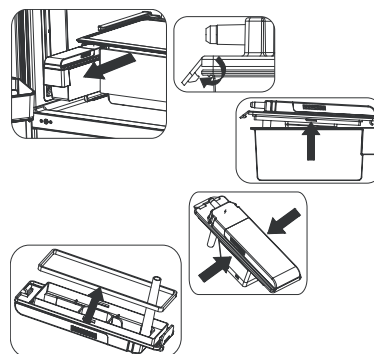

Note:

 
 
- There is no need to remove the filter during clearing the water storage box.
- Replacing the filter with new one when it becomes old. (replacement period: about 3 or 4 years)
- The ice-making function will not be affected even if the filter is removed.
- To order new filter, contact Samsung after service.

operating your refrigerator

DISASSEMBLY AND CLEAN THE PARTS

4. Disassembly of the humidifier

- Pull the concave handle on the humidifier's cover.
- Loosen the fasteners at left and right sides of the cover to take out the cover.
- Clean inside of the humidifier's water container and the upper cover, and wipe with a dry and soft cloth.
- After clean, reassemble the humidifier and then put it in the Refrigerator.
- When right side angle of the "△" mark on the humidifier's water container is between the two transverse lines under the "O" mark of the right baffle plate, it means water container of the humidifier has been set in place.



Note: You're recommended to clean the humidifier once each week.

When the humidifier is put into the Refrigerator, surface of its upper cover should align with that of its near clapboard.



WARNING


You only need to clean inside of the humidifier's water container. While cleaning, don't put it into water or under a tap for rinsing directly; otherwise, water will enter its inside and connectors, and the humidifier may not work properly.

- After cleaning, please check if there is water stain on the connectors at back of the water container. If so, wipe it or dry it naturally before putting it into the Refrigerator.
- You'd better not use detergent while cleaning. If unavoidable, rinse it so as to avoid residual detergent.
- The residual detergent will affect the atomization amount when the vibrator is working.
- Soft tools (i.e. hair brush) may be used while cleaning, but don't use sharp and hard tools; otherwise, surface of the vibrator at bottom of the water container may be scratched.

5. Disassembly and clean of the vegetable & fruit compartment


- Take out the small drawer before disassembling;
- Pull its door and big drawer to full extension, lift exterior of the whole drawer and pull it out lightly, lift the white plastic drawer and take it out;
- Rinse the white plastic drawer and the small drawer, and then wipe with a dry and soft cloth;
- Assemble the plastic drawer and the small drawer respectively in reverse order.

Note: If the whole drawer is taken out, please refer to installation method of the lower drawer of freezer.

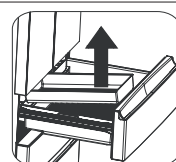

6. Disassembly and clean of the ice making compartment

- Pull out the drawer of the ice making compartment to full extension;
- Lift rear end of the drawer, move 20~30mm towards rear end of the Refrigerator, and then lift the front end to take out the drawer;
- Rinse the temperature-variable compartment's drawer, wipe it with a soft cloth;
- Assemble the temperature-variable compartment's drawer in reverse order.

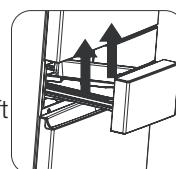


Note: Don't disassemble or clean the automatic ice maker.

DISASSEMBLY AND CLEAN THE PARTS

7. Disassembly and clean of temperature-variable compartment


- Pull the drawer of temperature-variable compartment to full extension;
- Lift rear side of the drawer, move 20~30mm toward rear side of the Refrigerator and lift the front side to take out the drawer;
- Rinse the drawer, and wipe with a dry and soft cloth;
- Assemble the drawer in reverse order.

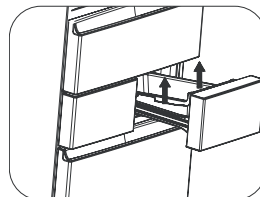

8. Disassembly and clean of the freezer drawer

- Pull the drawer of freezer to full extension, take out the upper drawer, and then lift exterior of the whole drawer;
- Lift it and pull out lightly, and then lift and take out the white plastic drawer;
- Rinse the drawer, and wipe with a dry and soft cloth;
- Assemble the drawer of freezer in reverse order.

Note: When assembling the whole drawer, roller of the drawer is under that of the Refrigerator body;
Please pay attention to direction when assembling the upper drawer of freezer. If the drawer is installed reversely, it can't be closed.

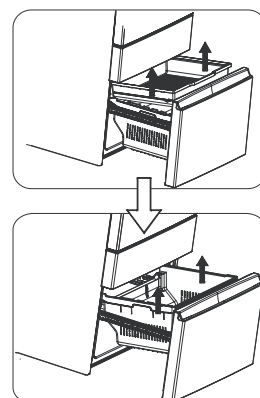

9. Clean of door and door seal

- Wipe with a soft cloth dipped with neutral detergent, and then dry with a clean and soft cloth;
- If doors and door seals of the Refrigerator are dirty, they are liable to become aging and be damaged; doors may not be closed properly; and cold air may leak. Thus, they should keep clean.

10. Safety inspection after cleaning

- If the power plug is inserted into the socket firmly?
- Is the power cord cracked or scratched?
- If the power plug gives out heat abnormally?

general information

State	Solution
When you have a long vacation	Take out all foods, pull out the power plug, open doors after cleaning interior of the Refrigerator thoroughly, and close them after drying, so as to avoid odor.
Power failure	Generally, internal temperature of the Refrigerator will not reduce within 1~2h. However, during power failure, you'd better not open its doors.
When moving the Refrigerator	Before moving, loose items within the Refrigerator must be fixed; Tighten the leveling legs, and lift them above the ground. If it will be transported to a far place, it should be put on a car to avoid failure.
When the Refrigerator body gives out heat	The Refrigerator hull may give out heat sometimes, particularly when it is just started. Please don't worry. Such heat is generated in order to prevent the hull from condensing damp.
Replace lamp	Lamp power of the fridge is 2W. If the lamp is damaged, please contact the service center but not replace by yourself.


troubleshooting

Problem	Solution
The appliance is not operating at all or the temperature is too high.	<ul style="list-style-type: none"> • Check if the power plug is correctly connected. • Is the temperature control on the front panel correctly set? Try setting the refrigerator to a warmer temperature. • Does sun shine on the appliance or are there any heat sources nearby? • Is the back of the refrigerator too close to the wall, preventing proper ventilation?
The food in the fridge is frozen.	<ul style="list-style-type: none"> • Check if the set temperature on the digital display is too low. Try setting the refrigerator to a warmer temperature. • Is the temperature in the room too low? Set the refrigerator warmer. • Did you store the food which is juicy in the coldest part of the refrigerator? Try moving those items to the other shelves in fridge instead of keeping them in the colder areas or bins (Optional).
You hear unusual noise or sounds.	<ul style="list-style-type: none"> • Check that the refrigerator is level and stable. • Is the back of the refrigerator too close to the wall, preventing proper ventilation? • Was anything dropped behind or under the refrigerator? • A “ticking” sound is heard from inside the refrigerator. It is normal and occurs because various accessories are contracting or expanding according to the temperature of the refrigerator interior. • A “ticking” sound is heard from inside the refrigerator. It is normal and occurs because various accessories are contracting or expanding according to the temperature of the refrigerator interior.
The cabinet-door sealing area of the appliance is hot and condensation is occurring.	<ul style="list-style-type: none"> • Some heat is normal as anti-condensators are installed in the vertical hinged section of the refrigerator to prevent condensation. • Is the refrigerator door ajar? Condensation can occur when you leave the door open for a long time.
You can hear water bubbling in the refrigerator.	<ul style="list-style-type: none"> • This is normal. The bubbling comes from refrigerant circulating through the refrigerator.
There is a bad smell in the refrigerator.	<ul style="list-style-type: none"> • Check for spoiled food. • Foods with strong odors (for example, fish) should be tightly covered. • Clean out your freezer periodically and throw away any spoiled or suspicious food.
Frost forms on the walls of the freezer.	<ul style="list-style-type: none"> • Is the air vent blocked? Remove any obstructions so air can circulate freely. • Allow sufficient space between the stored foods for efficient air circulation. • Is the freezer drawer closed properly?

information code

No.	Failure Item	Code Symbol		Description
		Freezer display	Fridge display	
1	Sensor of freezer (F) is abnormal	1	E	Sensor of freezer is short or open
2	Sensor of fridge (R) is abnormal	2	E	Sensor of fridge is short or open
3	F defrosting sensor (C) is abnormal	4	E	F defrosting sensor is short or open
4	Environment temperature sensor	6	E	Environment temperature sensor is short or open
5	Sensor of temperature-variable compartment	7	E	Sensor of temperature-variable compartment is short or open
6	Ice making sensor	8	E	Ice making sensor is short or open
7	Fan of freezer	21	E	Fan of freezer is locked and can't rotate
8	Compressor fan	23	E	Compressor fan is locked and can't rotate
9	Abnormal defrosting	24	E	Defrosting time exceeds the limit
10	Abnormal ice making	26	E	Ice making error
11	Air door electric heater of the temperature-variable compartment is abnormal	27	E	Temperature-variable compartment isn't equipped with air door electrical heater
12	Sensor of Vegetable & fruit compartment is abnormal	51	E	Sensor of Vegetable & fruit compartment is short or open
13	Humidity sensor is abnormal	52	E	Humidity sensor is short or open
14	The sensor at top of the vegetable & fruit compartment's air duct is abnormal	53	E	The sensor is short or open.
15	Air door electric heater of the fridge is abnormal	63	E	Fridge isn't equipped with air door electrical heater
16	Communication of main board and display panel is abnormal	PC	E	Communication error

For example: display panel of the compressor fan displays abnormally as follows:

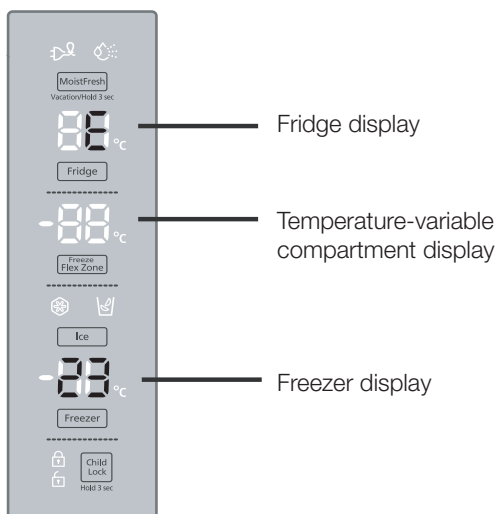

MEMO

Ambient Room Temperature Limits

This fridge/freezer is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperature range(°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

NOTE: Internal temperatures may be affected by such factors as the location of the fridge/freezer, ambient temperature and the frequency with which you open the door. Adjust the temperature as required to compensate for these factors.

English



Correct Disposal of This Product **(Waste Electrical & Electronic Equipment)**

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

SAMSUNG

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	Web site
AUSTRALIA	1300 362 603	www.samsung.com/au
COLOMBIA	01-8000112112	www.samsung.com/co
EIRE	0818 717 100	www.samsung.com/ie
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030 8282, 1800 110011, 1-800-3000-8282, 1800 266 8282	www.samsung.com/in
MALAYSIA	1800-88-9999	www.samsung.com/my
NEW ZEALAND	0800 SAMSUNG (726-7864)	www.samsung.com/nz
PANAMA	800-7267	www.samsung.com/latin
PHILIPPINES	1800-10-SAMSUNG (726-7864)	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG (726-7864)	www.samsung.com
U.K	0330 SAMSUNG (726-7864)	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com